



PVVK-SH HORIZONTAL VENT ADAPTOR KIT

FOR INSTALLATION ON MANTIS


EFFECTIVE DATE OCTOBER 2006

INSTRUCTIONS MUST BE LEFT WITH THE OWNER FOR FUTURE REFERENCE AFTER INSTALLATION

INSTALL FOAM GASKET

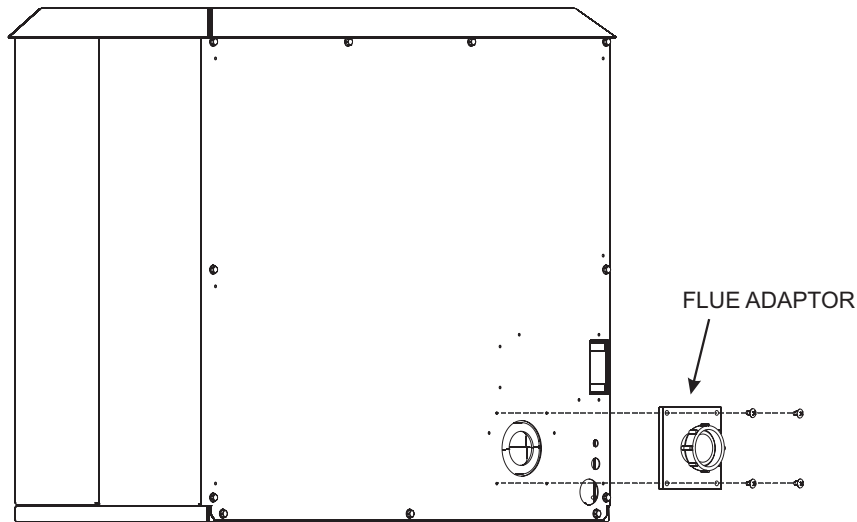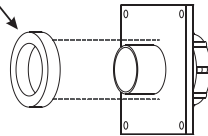

Attach flue adaptor to back of heater with four (4) screws.

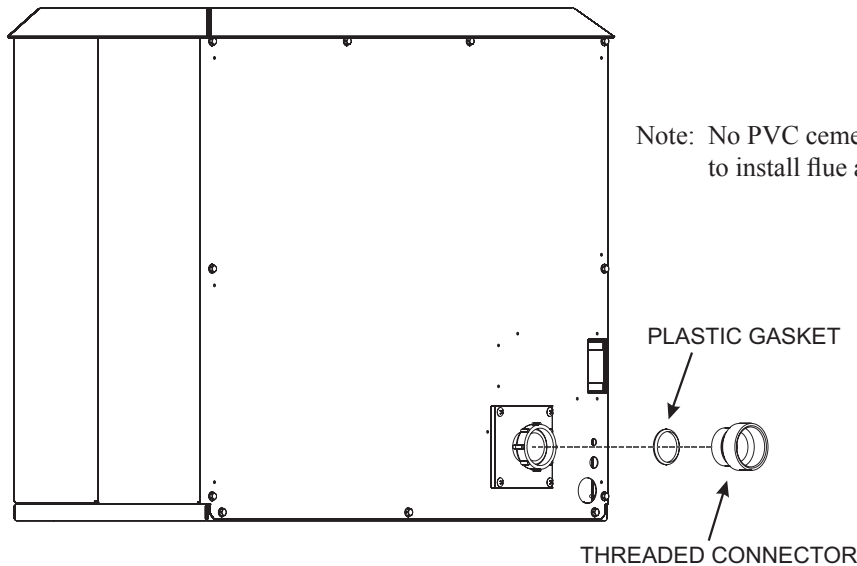

Install plastic gasket and screw threaded connector to the flue adaptor.
When these connections are made, continue with your vent run.
Cement all PVC joints on vent run.